 

 
 
 
 
 
 
 

 
 
 
 
 
 

 
 
 

 

 

 

 
 
 





Original	Substitut
 Power	 Power
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 I / II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH.List	 List
 Recall	 Back

Original	Substitut
 Source	 AV
 Menu	 Menu
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 Info	 Info
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Aspect	 Format
 CH +	 Ch +
 CH -	 Ch -
 Play/Pause / EPG	 Guide
 Play/Pause / EPG	 Play





Original	Substitut	Original	Substitut
Play/Pause / EPG	Pause	Green	Green
Stop / Fav	Pre Ch	Yellow	Yellow
Stop / Fav	Stop	Blue	Blue
Add / Del	TV/R		
Media	Media		
I<< / TTX	Text		
I<< / TTX	I<<		
<< / Cancel	<<		
<< / Cancel	SHIFT +  Shift + Exit		
Size	Eject		
Subtitle	Subt		
>>I / Hold	>>I		
>>I / Hold	SHIFT +  Shift + Stop		
>> / Reveal	>>		
Subpage	SHIFT +  Shift + Subt		
Index	SHIFT +  Shift + Info		
Red	A Red		

