

 
 


 
 







Original	Substitut
 Power	 Power
 Tv/Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Text	 Text / Goto
 Hold	 +  Shift + Stop /
 TVG	 Guide / EPG / -/--
 Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Aspect	 +  Shift + Picture / Format
 Media	 Smart / List
 Subpage	 Eject / Surround
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Substitut
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 Sleep	 Sleep / Timer
 >>I/Index	 >>I / Preset+
 Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-





Original	Substitut	Original	Substitut
Mute	Mute / Dimmer	P.Mode	Picture / Format
Display	Display / Media	S.Mode	Sound / Title
CH+	CH+ / Page+		
CH-	CH- / Page-		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
-/--	Shift + Guide / EPG / -/--		
Recall	Back / Return		
Source	AV / Input / RDS		

Original	Substitut
P.Mode	Picture / Format
S.Mode	Sound / Title

