









Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	TXT		Text / Goto
	Vol+		Vol+
	Input		AV / Input / RDS
	P+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	*		D.Menu / Top
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	*1		Smart / List
	*2		Display / Media
	Red		Red / Netflix / Search





	Original	Substitut	Original	Substitut
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	<<	 << / Tune-		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Audio	 Audio / Lang I/II		

