



Original	Substitut	Original	Substitut
	Power		Power
	Source (Games)		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	World/Internet		Smart / List
	PR-		CH- / Page-
	Menu		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Movie-Music-Phot		Display / Media
	Guide		Guide / EPG / -/-
	*/o		Picture / Format
	*/o..		Setup / OPT /





	Original	Substitut	Original	Substitut
	[≡]/Text	 GOTO TEXT		Text / Goto
	Red	 NETFLIX SEARCH		Red / Netflix / Search
	Green	 APP REPEAT		Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM		Blue / Prime Video / Random
	Lang	 LANG I/II AUDIO		Audio / Lang I/II
	[≡]..	 EQ SUBTITLE		Subtitle / EQ
	[-o-]	 SIZE ZOOM		Zoom / Size
	<<	 TUNE- ◀		<< / Tune-
	Pause	 STEP-FREEZE 		Pause / Step / Freeze
	>>	 TUNE+ ▶		>> / Tune+
	Rec	 REC MODE ●		Rec / Rec Mode
	Play	 SLOW ▶		Play / Slow
	Stop	 HOLD ■		Stop / Hold

