

 













 

 

 



 











Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 Red / Find	 Red / Netflix / Search
 Green / V-Format	 Picture / Format
 Green / V-Format	 Green / APP / Repeat
 Yellow / TXT	 Text / Goto
 Yellow / TXT	 Yellow / YouTube / Repeat
 Blue / Audio	 Audio / Lang I/II
 Blue / Audio	 Blue / Prime Video / Random
 Record	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold
 Shift	 Setup / OPT /
 << Fast	 << / Tune-
 Fast >>	 >> / Tune+
 < Slow	 I<< / Preset-
 Slow >	 >>I / Preset+

Original	Substitut
 Sleep	 Sleep / Timer
 Zoom	 Zoom / Size
 F1	 Shift + 1
 F2	 Shift + 2
 Menu	 Menu / Home
 Up / PR+	 Up
 Up / PR+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Left /Vol-	 Left
 Left /Vol-	 Vol-
 OK / List	 OK
 OK / List	 Smart / List
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 EPG	 Guide / EPG / -/--
 Down / PR-	 Down
 Down / PR-	 CH- / Page-





Original	Substitut	Original	Substitut
	Info		Info / Angle
	TV / AV		AV / Input / RDS
	Fav		Fav / Marker / PC
	Page+		Shift + CH+ /
	Pause		Pause / Step / Freeze
	SAT		Shift + 0
	SAT		Display / Media
	Page-		Shift + CH- /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Original	Substitut	Original	Substitut
	TV / Radio		TV/Radio /
	0		0
	+PR		Back / Return

