







 







 



 







 

 

 

 

 



 


 
 



 



 

 



 

 











Original		Substitut		Original		Substitut	
	Power		Power		Vol -		Vol-
	Source		AV / Input / RDS		Format		Picture / Format
	1		1		Prog -		CH- / Page-
	2		2		Red		Red / Netflix / Search
	3		3		Green		Green / APP / Repeat
	4		4		Yellow		Yellow / YouTube / Repeat
	5		5		Blue		Blue / Prime Video / Random
	6		6		Menu		Menu / Home
	7		7		Media		Display / Media
	8		8		Up		Up
	9		9		Left		Left
	Guide		Guide / EPG / -/--		OK		OK
	0		0		Right		Right
	Infos		Info / Angle		Back		Back / Return
	Vol +		Vol+		Back		Shift + Back / Return
	Mute		Mute / Dimmer		Down		Down
	Prog +		CH+ / Page+		Exit		Exit / Cancel / Clear





Original	Substitut
	Audio / Lang I/II
	Subtitle / EQ
	Text / Goto
	TV/Radio /
	I<< / Preset-
	<< / Tune-
	>> / Tune+
	>> / Preset+
	Rec / Rec Mode
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze

Original	Substitut

