






 

 
 
 
 


 
 



 




Original	Substitut
	Power
	Rec / Rec Mode
	Red / Netflix / Search
	I<< / Preset-
	Green / APP / Repeat
	Stop / Hold
	Yellow / YouTube / Repeat
	Play / Slow
	Blue / Prime Video / Random
	>>I / Preset+
	AV / Input / RDS
	Audio / Lang I/II
	Picture / Format
	Zoom / Size
	Menu / Home
	Text / Goto
	Pause / Step / Freeze

Original	Substitut
	Left
	Up
	Right
	OK
	Down
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	Sound / Title
	CH- / Page-
	Smart / List
	1
	2
	3
	4
	5








	Original	Substitut		Original	Substitut
	6	6			
	7	7			
	8	8			
	9	9			
	[i+]	Info / Angle			
	0	0			
	P<P	Fav / Marker / PC			





Original	Substitut	Original	Substitut
0	 Eject / Surround	 [≡]	 Text / Goto
-0-	 Subtitle / EQ	 Left	 Left
Power	 Power	 Up	 Up
Rec	 Rec / Rec Mode	 Right	 Right
I<<	 I<< / Preset-	 OK	 OK
Red	 Red / Netflix / Search	 Down	 Down
Green/[ [ ] ]	 Green / APP / Repeat	 Vol+	 Vol+
Stop	 Stop / Hold	 Mute	 Mute / Dimmer
Play	 Play / Slow	 P+	 CH+ / Page+
Yellow / List	 Yellow / YouTube / Repeat	 Vol-	 Vol-
>>I	 >>I / Preset+	 Smart J	 Sound / Title
AV/[?]	 AV / Input / RDS	 P-	 CH- / Page-
I-II/[≡≡]	 Audio / Lang I/II	 Smart [ ]	 Smart / List
[<>]/[+]	 Zoom / Size	 1	 1
PIP [■]	 Picture / Format	 2	 2
Menu	 Menu / Home	 3	 3
Pause	 Pause / Step / Freeze	 4	 4



 

 


 

 
 







 

 



 
 


	Original	Substitut		Original	Substitut
	5	TAPE 5	5		
	6	TUNER 6	6		
	7	AUX - HDD 7	7		
	8	USB 8	8		
	9	BLUETOOTH 9	9		
	[i+]	ANGLE INFO	Info / Angle		
	0	HDMI - SAT 0	0		
	P<P	PC FAV MARKER	Fav / Marker / PC		





Original	Substitut	Original	Substitut
	Power		Power
	-0-		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AV/[?]		AV / Input / RDS
	I-II/[≡ ≡]		Audio / Lang I/II
	[<>]/[+]		Zoom / Size
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	Smart J		Sound / Title
	P-		CH- / Page-
	Smart [ ]		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Fav / Marker / PC

