



Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	V+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Substitut	Original	Substitut
	V-		Vol-
	World/Internet		Smart / List
	P-		CH- / Page-
	Menu		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Music/Camera		Display / Media
	TV Guide		Guide / EPG / -/-
	*/O		Shift + 1
	*/Q		Shift + 2





Original	Substitut	Original	Substitut
[=]/Text	GOTO TEXT Text / Goto		
Red	NETFLIX SEARCH Red / Netflix / Search		
Green	APP REPEAT Green / APP / Repeat		
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue	Prime Video RANDOM Blue / Prime Video / Random		
LANG.	LANG I/II AUDIO Audio / Lang I/II		
[=].	TITLE SOUND Sound / Title		
[-O-]	OPT-TOOLS SETUP Setup / OPT /		
<<	TUNE- << / Tune-		
	STEP-FREEZE Pause / Step / Freeze		
>>	TUNE+ >> / Tune+		
●	REC MODE ● Rec / Rec Mode		
▶	SLOW ▶ Play / Slow		
■	HOLD ■ Stop / Hold		

