













 

 



 

 



 

 

 








| Original | Substitut | Original | Substitut |
|---|-----------|---|-------------------|
|  | POWER |  | Power |
|  | INFO |  | Info / Angle |
|  | MUTE |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | SOURCE |  | AV / Input / RDS |
|  | 0 |  | 0 |
|  | AUDIO |  | Audio / Lang I/II |
|  | FORMAT |  | Picture / Format |
|  | BACK |  | Back / Return |

| Original | Substitut | Original | Substitut |
|---|-----------|---|------------------------|
|  | MENU |  | Menu / Home |
|  | EXIT |  | Exit / Cancel / Clear |
|  | UP |  | Up |
|  | LEFT |  | Left |
|  | ENTER |  | OK |
|  | RIGHT |  | Right |
|  | VOL+ |  | Vol+ |
|  | DOWN |  | Down |
|  | CH+ |  | CH+ / Page+ |
|  | VOL- |  | Vol- |
|  | CH- |  | CH- / Page- |
|  | LIST |  | Smart / List |
|  | SLEEP |  | Sleep / Timer |
|  | EPG |  | Guide / EPG / -/- |
|  | FAV |  | Fav / Marker / PC |
|  | << |  | << / Tune- |
|  | RED |  | Red / Netflix / Search |



