
















 
 












Original	Substitut	Original	Substitut
	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Original	Substitut	Original	Substitut
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List
	Vol-		Vol-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-







































Original	Substitut
Green	Green / APP / Repeat
>>	>> / Tune+
Yellow	Yellow / YouTube / Repeat
I<<	I<< / Preset-
Blue	Blue / Prime Video / Random
>>I	>>I / Preset+
[=]	Text / Goto
Play	Play / Slow
Pause	Pause / Step / Freeze
[=+]	Zoom / Size
Stop/Still	Stop / Hold
Radio	TV/Radio /
[=◆]/[++]	Setup / OPT /
[=x]	Picture / Format
[=o]/Subtitle	Subtitle / EQ
DMP	D.Menu / Top
Rec	Rec / Rec Mode

Original	Substitut





Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Text / Play/Pause		Play / Slow
	Text / Play/Pause		Pause / Step / Freeze
	Stop / Still		Stop / Hold
	Rec		Rec / Rec Mode
	Audio I/II		Audio / Lang I/II
	Subtitle / [≡o]		Subtitle / EQ
	[≡x]		Picture / Format
	Size / Aspect		Zoom / Size
	Sleep		Sleep / Timer
	Radio		TV/Radio /
	DMP		D.Menu / Top
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle

Original	Substitut	Original	Substitut
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Recall		Back / Return
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	Index		Display / Media
	CH -		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Original		Substitut	
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/-
	0		0
	Fav		Fav / Marker / PC
	Red / <<		Red / Netflix / Search
	Green / >>		Green / APP / Repeat
	Yellow / <<		Yellow / YouTube / Repeat
	Blue / >>		Blue / Prime Video / Random
	Text / Play/Pause		Shift + Play /
	Red / <<		Shift + Red / Netflix /
	Green / >>		Shift + Green / APP /
	Yellow / <<		Shift + Yellow / YouTube /
	Blue / >>		Shift + Blue / Prime

Original	Substitut

