





 









 









 












 













 





 
 


 
 

 
 











 













 




 







Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Tv	 TV/Radio /	 Source	 AV / Input / RDS
 1	 1	 PR-	 CH- / Page-
 2	 2	 Info	 Info / Angle
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Up	 Up
 7	 7	 Return	 Shift + Back / Return
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 FAV CH	 Fav / Marker / PC	 Right	 Right
 0	 0	 CH LIST	 Smart / List
 PRE CH	 Back / Return	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 PR+	 CH+ / Page+	 Green	 Green / APP / Repeat

Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Tv	 TV/Radio /	 Source	 AV / Input / RDS
 1	 1	 PR-	 CH- / Page-
 2	 2	 Info	 Info / Angle
 3	 3	 Menu	 Menu / Home
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Tools	 Setup / OPT /
 6	 6	 Up	 Up
 7	 7	 Return	 Shift + Back / Return
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 FAV CH	 Fav / Marker / PC	 Right	 Right
 0	 0	 CH LIST	 Smart / List
 PRE CH	 Back / Return	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 PR+	 CH+ / Page+	 Green	 Green / APP / Repeat





Original	Substitut	Original	Substitut
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 TTX/MIX	 Text / Goto		
 Media P	 Display / Media		
 P SIZE	 Zoom / Size		
 Dual	 Audio / Lang I/II		
 AD	 Eject / Surround		
 SUBT	 Subtitle / EQ		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

