



Original	Substitut	Original	Substitut
 Power	 Power	 Vol+	 Vol +
 TV/VCR - DVD	 Smart	 Vol-	 Vol -
 1	 1	 P/TRK+	 Ch +
 2	 2	 P/TRK-	 Ch -
 3	 3	 Slow+	 Shift + Ch +
 4	 4	 Slow-	 Shift + Ch -
 5	 5	 << / Index	 <<
 6	 6	 S.Mode	 Shift + Dual
 7	 7	 P.Mode	 Format
 8	 8	 >> / Mix	 >>
 9	 9	 I<<	 I<<
 0	 0	 >>I	 >>I
 -/--	 Guide	 Stop	 Stop
 Mute	 Mute	 Play / Pause	 Play
 I-II Audio	 Dual	 Play / Pause	 Pause
 TV/Text	 Text	 Red / Menu	 Red
 Input	 AV	 Red / Menu	 Menu

Original	Substitut	Original	Substitut
 Power	 Power	 Vol+	 Vol +
 TV/VCR - DVD	 Smart	 Vol-	 Vol -
 1	 1	 P/TRK+	 Ch +
 2	 2	 P/TRK-	 Ch -
 3	 3	 Slow+	 Shift + Ch +
 4	 4	 Slow-	 Shift + Ch -
 5	 5	 << / Index	 <<
 6	 6	 S.Mode	 Shift + Dual
 7	 7	 P.Mode	 Format
 8	 8	 >> / Mix	 >>
 9	 9	 I<<	 I<<
 0	 0	 >>I	 >>I
 -/--	 Guide	 Stop	 Stop
 Mute	 Mute	 Play / Pause	 Play
 I-II Audio	 Dual	 Play / Pause	 Pause
 TV/Text	 Text	 Red / Menu	 Red
 Input	 AV	 Red / Menu	 Menu





Original		Substitut	
	Green / DVD		Green
	Green / DVD		D. Menu
	Yellow / P.Size		Yellow
	Blue / Info		Blue
	Blue / Info		Info
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Open / Close		Eject
	Rec / Return		Rec
	Rec / Return		Back
	Pre-CH		Pre Ch
	Step		Shift + Pause
	Sleep		Sleep
	Show View		Media

Original		Substitut	
	Clear		Exit
	Angle		3D
	Repeat		Shift + Text
	SP/LP		TV/R
	Crystal PB		Options
	Zoom		Shift + Eject
	Subtitle		Subt

