 




Original	Substitut	Original	Substitut
	Power		Power
	Tv		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		OK
	PRE-CH		Back / Return
	CH LIST		Shift + Smart / List
	FAV CH		Fav / Marker / PC
	Tools		Setup / OPT /

Original	Substitut	Original	Substitut
	Menu		Menu / Home
	Return		Shift + Back / Return
	Info		Info / Angle
	Internet		Smart / List
	Exit		Exit / Cancel / Clear
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Red		Red / Netflix / Search
	Enter		Shift + OK
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer





Original	Substitut
 Source	 AV / Input / RDS
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 TTX/MIX	 Text / Goto
 Media.P	 Display / Media
 Content	 Picture / Format
 Guide	 Guide / EPG / -/--
 Subt	 Subtitle / EQ
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Substitut

