



Original	Substitut	Original	Substitut
 Power	 Power	 Tools	 Setup / OPT /
 Mute	 Mute / Dimmer	 vTuner	 Text / Goto
 Play	 Play / Slow	 Menu	 Menu / Home
 Pause	 Pause / Step / Freeze	 Up	 Up
 Stop	 Stop / Hold	 Info	 Info / Angle
 <<	 << / Tune-	 Left	 Left
 >>	 >> / Tune+	 Enter	 OK
 I<<	 I<< / Preset-	 Right	 Right
 >>I	 >>I / Preset+	 Exit	 Exit / Cancel / Clear
 3D Sound	 Sound / Title	 Down	 Down
 Dolby PL II	 Audio / Lang I/II	 Return	 Back / Return
 S/W Level	 Subtitle / EQ	 Vol +	 Vol+
 Eject	 Eject / Surround	 Smart Hub	 Smart / List
 Full Screen	 Zoom / Size	 Tuning / CH +	 CH+ / Page+
 Sleep	 Sleep / Timer	 Vol -	 Vol-
 Function	 TV/Radio /	 DSP	 Display / Media
 Disc Menu	 D.Menu / Top	 Tuning / CH -	 CH- / Page-











 



 



 







 

 

 

 

 

 









 







 



 





 







Original	Substitut	Original	Substitut
1 / RDS Display	1	Search	Shift + Red / Netflix /
2	2	Repeat	Shift + Green / APP /
3 / TA	3		
4 / PTY -	4		
5 / PTY Search	5		
6 / PTY +	6		
7	7		
8	8		
9	9		
SFE Mode	Guide / EPG / -/--		
0	0		
2D → 3D	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green / iPod Sync	Green / APP / Repeat		
Yellow / Tuner Memory	Yellow / YouTube / Repeat		
Blue / Mo/St	Blue / Prime Video / Random		
Title Menu / PopUp Menu	Shift + Home Menu / Home		

Original	Substitut	Original	Substitut
Search	Shift + Red / Netflix /		
Repeat	Shift + Green / APP /		





Original	Substitut	Original	Substitut
 Power	 Power	 Stop	 Stop / Hold
 TV Source	 AV / Input / RDS	 Play	 Play / Slow
 Sleep	 Sleep / Timer	 Pause	 Pause / Step / Freeze
 1	 1	 Vol+	 Vol+
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Vol-	 Vol-
 5	 5	 CH-	 CH- / Page-
 6	 6	 Menu	 Menu / Home
 7	 7	 Tools	 Setup / OPT /
 8	 8	 Up	 Up
 9	 9	 Info	 Info / Angle
 0	 0	 Left	 Left
 I<<	 I<< / Preset-	 Enter	 OK
 >>I	 >>I / Preset+	 Right	 Right
 <<	 << / Tune-	 Return	 Back / Return
 >>	 >> / Tune+	 Down	 Down





Original	Substitut	Original	Substitut
Exit	Exit / Cancel / Clear		
Red	Red / Netflix / Search		
Green/iPod	Green / APP / Repeat		
Yellow/Tuner	Yellow / YouTube / Repeat		
Blue/Mo/St	Blue / Prime Video / Random		
Smart HUB	Smart / List		
Search	Shift + Red / Netflix /		
2D-3D	Audio / Lang I/II		

