



Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	CH List		Smart / List
	CH-		CH- / Page-
	Netflix		Shift + Red / Netflix /
	Home		Menu / Home
	prime video		Shift + Blue / Prime
	Samsung TV		TV/Radio /
	Up		Up
	Disney+		Picture / Format
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Substitut	Original	Substitut
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Settings	 Setup / OPT /		
 Info	 Info / Angle		
 AD/SUBT.	 Subtitle / EQ		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 I<<	 I<< / Preset-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 >>I	 >>I / Preset+		

Original	Substitut

