



 



 





 





 

 

 

 



 

 























 

 













Original	Substitut	Original	Substitut
	Power		Power
	Freeze		Pause / Step / Freeze
	Subtitle		Subtitle / EQ
	Guide		Guide / EPG / -/--
	Fav.CH		Fav / Marker / PC
	I-II		Audio / Lang I/II
	Text / Mix		Text / Goto
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	P.Size		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Jump		Back / Return
	0		0
	Ent		Display / Media
	Vol+		Vol+
	Info		Info / Angle
	CH+		CH+ / Page+
	Vol-		Vol-
	Input		AV / Input / RDS
	CH-		CH- / Page-
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right





Original	Substitut
	Sound / Title
	Down
	Picture / Format
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Rec / Rec Mode
	Play / Slow
	Zoom / Size
	Stop / Hold

Original	Substitut

