



 

 

 

 



 

 

 

 











 





















































 



Original		Substitut		Original		Substitut	
	Power		Power		Vol +		Vol+
	Mute		Mute / Dimmer		MTS		Audio / Lang I/II
	1		1		CH +		CH+ / Page+
	2		2		Vol -		Vol-
	3		3		REC List		Smart / List
	4		4		CH -		CH- / Page-
	5		5		FAV List		Fav / Marker / PC
	6		6		REC		Rec / Rec Mode
	7		7		Freeze		Pause / Step / Freeze
	8		8		Menu		Menu / Home
	9		9		Up		Up
	DTV / ATV		D.Menu / Top		Source		AV / Input / RDS
	0		0		Left		Left
	Recall		Back / Return		Enter		OK
	P.Mode		Picture / Format		Right		Right
	S.Mode		Sound / Title		Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Down		Down





Original	Substitut	Original	Substitut
 Display	 Display / Media	 Hold	 Shift + Stop /
 Red	 Red / Netflix / Search	 Text	 Text / Goto
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 << / Guide	 << / Tune-		
 << / Guide	 Guide / EPG / -/--		
 Play/Pause / Timeshift	 Play / Slow		
 >> / Aspect	 >> / Tune+		
 << / Cancel	 << / Preset-		
 >> / Subpage	 >> / Preset+		
 Stop / Index	 Info / Angle		
 Stop / Index	 Stop / Hold		
 TV / Radio	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Reveal	 Setup / OPT /		
 Size	 Zoom / Size		

Original	Substitut	Original	Substitut
 Hold	 Shift + Stop /		
 Text	 Text / Goto		

