





 









Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV/ATV		Info / Angle
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substitut	Original	Substitut
	Vol+		Vol+
	MTS		Setup / OPT /
	CH+		CH+ / Page+
	Vol-		Vol-
	RecList		Smart / List
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original	Substitut
 Display	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 Guide	 Guide / EPG / -/--
 Play	 Play / Slow
 Pause/TimeShift	 Shift + Pause / Step /
 >>Aspect	 >> / Tune+
 I<</Cancel	 Shift + Exit / Cancel / Clear
 I<</Cancel	 I<< / Preset-
 >>I/Sub.PG	 >>I / Preset+
 Stop/Index	 Stop / Hold
 Tv/Radio	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Reveal	 D.Menu / Top

Original	Substitut
 Size	 Zoom / Size
 Hold	 Shift + Stop /
 Text	 Text / Goto

