




 

 

 




 
 



 

 

 














Original	Substitut
 On/Off	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Picture	 Format

Original	Substitut
 Sound	 Dual
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 FAV	 Shift + Pre Ch
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Info	 Info
 Text	 Text
 Subtitle	 Subt
 TV	 TV/R





Original	Substitut
YouTube	Media
Netflix	Smart
Net+	Shift + Media
Rec/DVD Menu	Rec
I<<	I<<
>>I	>>I
Stop	Stop
<<	<<
>>	>>
Play	Play
Pause	Pause
Rec List/DVD	List
Red/Goto	Red
Green/A-B	Green
Yellow/Angle	Yellow
Blue/Repeat	Blue

Original	Substitut

