






 













Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	<<		I<< / Preset-
	>>		>>I / Preset+
	:Q		Sound / Title
	TV Play		Eject / Surround
	Format		Picture / Format
	Live TV		TV/Radio /
	≡		D.Menu / Top
	⚙		Setup / OPT /
	Green / TTX		Text / Goto

Original	Substitut	Original	Substitut
	Source		AV / Input / RDS
	Home		Menu / Home
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Del		Exit / Cancel / Clear
	Blue / Info		Info / Angle
	Back		Back / Return
	Vol+		Vol+
	Vol-		Vol-
	Internet		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Mouse		Display / Media
	1		1





	Original	Substitut	Original	Substitut
	2	DVD 2		
	3	CD - STB 3		
	4	VIDEO 4		
	5	TAPE 5		
	6	TUNER 6		
	7	AUX - HDD 7		
	8	USB 8		
	9	BLUETOOTH 9		
	0	HDMI - BAT 0		
	Red / EPG	GUIDE EPG		
	←]	PC FAV MARKER		
	Red / EPG	NETFLIX SEARCH		
	Green / TTX	APP REPEAT		
	Yellow / FAV	YouTube REPEAT A-B		
	Blue / Info	Prime Video RANDOM		
	Yellow / FAV	SHIFT + PC FAV MARKER		

