















 







 







 























 






 








Original	Substitut
 POWER	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SUBPAGE	 Guide / EPG / -/-
 I/II	 Audio / Lang I/II
 SWAP / RED	 Back / Return
 SWAP / RED	 Red / Netflix / Search
 AV	 AV / Input / RDS
 FREEZE	 Pause / Step / Freeze

Original	Substitut
 GAME / BLUE	 Blue / Prime Video / Random
 SLEEP / GREEN	 Green / APP / Repeat
 SLEEP / GREEN	 Sleep / Timer
 STATUS /	 Yellow / YouTube / Repeat
 PP/CANCEL	 Exit / Cancel / Clear
 P.S	 Display / Media
 MUTE	 Mute / Dimmer
 UP	 Up
 CH+	 CH+ / Page+
 TV/TEXT	 Text / Goto
 LEFT	 Left
 VOL-	 Vol-
 MENU	 Menu / Home
 RIGHT	 Right
 VOL+	 Vol+
 DOWN	 Down
 CH-	 CH- / Page-



