 





 


 
 


 
 


 


 


 


 
 


 
 



 








 
 




 

 



 
 


 


 














Original	Substitut	Original	Substitut
 Power	 Power	 Prog-	 Ch -
 Open / Close	 Eject	 Input Select	 AV
 1	 1	 TV / DVD	 TV/R
 2	 2	 Top Menu	 Shift + Menu
 3	 3	 Menu	 Menu
 4	 4	 System Menu	 D. Menu
 5	 5	 Title List	 List
 6	 6	 Timer	 Sleep
 7	 7	 Display	 Info
 8	 8	 Timer List	 Mute
 9	 9	 Up	 Up
 0	 0	 Left	 Left
 Audio	 Dual	 Enter	 Ok
 Set	 Smart	 Right	 Right
 Subtitle	 Subt	 Down	 Down
 Angle	 Media	 Return	 Back
 Prog+	 Ch +	 Options	 Options

Original	Substitut	Original	Substitut
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE		
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT		 AV
 TOP MENU			
 CLEAR	 EXIT		 BACK
	 HOME		
	 APP		
 1	 2		
 4	 5		
 7	 8		
 GUIDE			
			
			
<a href="http://www.mandis.tv">www.mandis.tv</a>			





	Original		Substitut	
	I<<		I<<	
	>>I		>>I	
	↑		Vol -	
	↓		Vol +	
	<< / <II / <I		<<	
	Play		Play	
	>> / I> / II>		>>	
	Time / Text		Text	
	Pause		Pause	
	Stop		Stop	
	Rec		Rec	
	Rec Stop		Shift + Stop	
	Rec Mode		Shift + Rec	
	Synchro Rec		Red	
	TV Power		Shift + Power	
	TV Input		Shift + AV	
	TV Prog+		Shift + Ch +	

	Original		Substitut	
	TV Vol+		Shift + Vol +	
	TV Vol-		Shift + Vol -	
	TV Prog-		Shift + Ch -	

