





Original	Substitut
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Substitut
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	









Original	Substitut
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	



 
 



 





 



 

 



 



 
 

 
 

 
 
 


 


 



 



 

 

 



 


 

 





Original	Substitut
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	









Original		Substitut		Original		Substitut	
	Power		Power		Display		Info
	Source		AV		Mute		Mute
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		Menu/Home		Media
	4		4		Return/Exit		Back
	5		5		Up		Up
	6		6		OK		Ok
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Play		Play
	Clear		Exit		Stop		Stop
	Enter		Pre Ch		Pause		Pause
	Theatre		Smart		>>/Tuning+		>>
	Sound Field		Dual		<</Tuning-		<<
	AMP Menu		Menu		>>I/Preset+		>>I



