 




Original	Substitut
	Eject
	Eject / Surround
	Power
	Info / Angle
	Format
	Picture / Format
	Choix Son
	Sound / Title
	Compt / Duree
	Setup / OPT /
	Annulo / 0
	Exit / Cancel / Clear
	TV / Magn
	Smart / List
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Substitut
	-/--
	Guide / EPG / -/--
	0
	0
	Choix Entree
	AV / Input / RDS
	Vol+
	Vol+
	Chaine+
	CH+ / Page+
	Vol-
	Vol-
	Chaine-
	CH- / Page-
	Enr
	Rec / Rec Mode
	Relenti
	Shift + << /
	x2
	Shift + >> /
	SP / LP
	Display / Media
	I<<
	I<< / Preset-
	I>>
	I>> / Preset+
	Menu
	Menu / Home
	Up
	Up
	Pause
	Pause / Step / Freeze
	Minuterie
	Sleep / Timer



[illegible]



Original	Substitut	Original	Substitut
	Power		Power
	Affiche		Info / Angle
	Format		Picture / Format
	Choix Son		Sound / Title
	TV / Magn		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	[≡]		Text / Goto

Original	Substitut	Original	Substitut
	Vol+		Vol+
	Chaine+		CH+ / Page+
	[]		Display / Media
	Vol-		Vol-
	Chaine-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

