





 




























Original	Substitut
 Power	 Power
 [↔]/[/]	 Picture / Format
 [*]/[II]	 Zoom / Size
 Source/[+]	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [i+]/[?]	 Info / Angle
 0	 0
 -/--/Recall	 Guide / EPG / -/--
 Red/♪	 Red / Netflix / Search

Original	Substitut
 Green/*	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/[+]	 Blue / Prime Video / Random
 []	 Subtitle / EQ
 Pause	 Pause / Step / Freeze
 Up	 Up
 [=]	 Text / Goto
 <<	 << / Tune-
 Left	 Left
 OK	 OK
 Play	 Play / Slow
 Right	 Right
 >>	 >> / Tune+
 Down	 Down
 Stop	 Stop / Hold
 Menu	 Menu / Home
 Vol+	 Vol+





Original	Substitut	Original	Substitut
	Mute		Mute / Dimmer
	Prog+		CH+ / Page+
	Vol-		Vol-
	Prog-		CH- / Page-








 


 


 


 
 


















 



 


 


Original	Substitut
 Power	 Power
 Up	 Up
 Pause	 Pause / Step / Freeze
 Left	 Left
 <<	 << / Tune-
 OK	 OK
 Play	 Play / Slow
 Right	 Right
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Down	 Down

Original	Substitut





	Original	Substitut		Original	Substitut
	Power		Power		Down
	1		1		Right
	2		2		>> / Tune+
	3		3		<< / Tune-
	4		4		Left
	5		5		Rec / Rec Mode
	6		6		CH+ / Page+
	7		7		CH- / Page-
	8		8		
	9		9		
	0		0		
	-/--/Recall		Guide / EPG / -/--		
	OK		OK		
	Play		Play / Slow		
	Up		Up		
	Pause		Pause / Step / Freeze		
	Stop		Stop / Hold		

