
 








 



 




 



 

 





 

 













Original	Substitut	Original	Substitut
 Data Screen	 Smart / List	 Volume-	 Vol-
 On	 Power	 Rec	 Rec / Rec Mode
 1	 1	 Pause	 Pause / Step / Freeze
 2	 2	 Frame	 Display / Media
 3	 3	 X2	 Picture / Format
 Prog+	 CH+ / Page+	 Wake Up	 OK
 4	 4	 X1/10	 Text / Goto
 5	 5	 X1/5	 AV / Input / RDS
 6	 6	 Muting	 Mute / Dimmer
 Prog-	 CH- / Page-	 Counter Reset	 Back / Return
 7	 7	 Play	 Play / Slow
 8	 8	 <<	 << / Tune-
 9	 9	 >>	 >> / Tune+
 Volume+	 Vol+	 Stop	 Stop / Hold
 0	 0		
 1-	 Guide / EPG / -/--		
 2-	 Fav / Marker / PC		

Original	Substitut	Original	Substitut
 Volume-	 Vol-	 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze	 Frame	 Display / Media
 X2	 Picture / Format	 Wake Up	 OK
 X1/10	 Text / Goto	 X1/5	 AV / Input / RDS
 Muting	 Mute / Dimmer	 Counter Reset	 Back / Return
 Play	 Play / Slow	 <<	 << / Tune-
 >>	 >> / Tune+	 Stop	 Stop / Hold

