



| Original                                                                            | Substitut | Original                                                                            | Substitut         |
|-------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------|-------------------|
|    | Power     |    | Power             |
|    | Input     |    | AV / Input / RDS  |
|    | 1         |    | 1                 |
|    | 2         |    | 2                 |
|    | 3         |    | 3                 |
|    | 4         |    | 4                 |
|    | 5         |    | 5                 |
|    | 6         |    | 6                 |
|    | 7         |    | 7                 |
|    | 8         |    | 8                 |
|  | 9         |  | 9                 |
|  | Lang      |  | Audio / Lang I/II |
|  | 0         |  | 0                 |
|  | TXT       |  | Text / Goto       |
|  | Vol+      |  | Vol+              |
|  | Mute      |  | Mute / Dimmer     |
|  | P+        |  | CH+ / Page+       |

| Original                                                                              | Substitut | Original                                                                              | Substitut             |
|---------------------------------------------------------------------------------------|-----------|---------------------------------------------------------------------------------------|-----------------------|
|    | Vol-      |    | Vol-                  |
|    | Home      |    | Menu / Home           |
|    | P-        |    | CH- / Page-           |
|    | Guide     |    | Guide / EPG / -/-     |
|    | Up        |    | Up                    |
|    | i         |    | Info / Angle          |
|    | Left      |    | Left                  |
|    | OK        |    | OK                    |
|    | Right     |    | Right                 |
|    | Back      |    | Back / Return         |
|  | Down      |  | Down                  |
|  | Exit      |  | Exit / Cancel / Clear |
|  | <<        |  | << / Tune-            |
|  | Pause     |  | Pause / Step / Freeze |
|  | >>        |  | >> / Tune+            |
|  | Rec       |  | Rec / Rec Mode        |
|  | Play      |  | Play / Slow           |



