

 








 





 





Original	Substitut
 Power	 Power
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/Radio	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 V+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Substitut
 V-	 Vol-
 Guia	 Guide / EPG / -/-
 P-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Entrada	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Info	 Info / Angle
 Down	 Down
 Salir	 Exit / Cancel / Clear
 Subtítulo	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Back	 Back / Return
 Imagen	 Picture / Format
 Sonido	 Setup / OPT /





Original	Substitut
ASPECTO Aspecto	SIZE ZOOM Zoom / Size
Red Red	NETFLIX SEARCH Red / Netflix / Search
Green Green	APP REPEAT Green / APP / Repeat
Yellow Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue Blue	Prime Video RANDOM Blue / Prime Video / Random
<</[=i]	TUNE- << / Tune-
Play	SLOW Play / Slow
Pause/[=◆]	STEP-FREEZE Pause / Step / Freeze
>>/[=?]	TUNE+ >> / Tune+
I<</[=o]	PRESET- I<< / Preset-
Stop/[=+]	HOLD Stop / Hold
>>I/[=x]	PRESET+ >>I / Preset+
Rec	REC MODE Rec / Rec Mode
[ / =]	GOTO TEXT Text / Goto
FAV	SHIFT + PC FAV MARKER Shift + Fav / Marker / PC
Home	SHIFT + HOME MENU Shift + Menu /
Mouse	LIST SMART Smart / List

Original	Substitut
USB	SHIFT + USB 8 Shift + 8

