



Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	V+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Substitut	Original	Substitut
	V-		Vol-
	World/Internet		Smart / List
	P-		CH- / Page-
	Menu		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Music/Camera		Display / Media
	TV Guide		Guide / EPG / -/-
	*/O		Shift + 1
	*/Q		Shift + 2





	Original	Substitut	Original	Substitut
	[≡]/Text	GOTO TEXT		Text / Goto
	Red	NETFLIX SEARCH		Red / Netflix / Search
	Green	APP REPEAT		Green / APP / Repeat
	Yellow	YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM		Blue / Prime Video / Random
	Lang	LANG I/II AUDIO		Audio / Lang I/II
	[≡]..	TITLE SOUND		Sound / Title
	[-O-]	OPT-TOOLS SETUP		Setup / OPT /
	<<	TUNE- ◀◀		<< / Tune-
	Pause	STEP-FREEZE 		Pause / Step / Freeze
	>>	TUNE+ ▶▶		>> / Tune+
	Rec	REC MODE ●		Rec / Rec Mode
	Play	SLOW ▶		Play / Slow
	Stop	HOLD ■		Stop / Hold

