




Original	Substitut
Power	Power
Open / Close	Eject / Surround
OSD	Display / Media
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Angle	Info / Angle
7	7
8	8
9	9
Language	Audio / Lang I/II
R/L	Blue / Prime Video / Random
0	0

Original	Substitut
10+	Guide / EPG / -/--
Setup	Setup / OPT /
Mute	Mute / Dimmer
Clear	Exit / Cancel / Clear
Prog	TV/Radio /
Time	Sleep / Timer
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Title	Sound / Title
Menu	Menu / Home
Default	AV / Input / RDS
<<	<< / Tune-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze












 












 





	Original	Substitut	Original	Substitut
	I<<	 I<< / Preset-		
	>>	 >> / Tune+		
	Stop	 Stop / Hold		
	>>	 >> / Preset+		
	N/F	 Red / Netflix / Search		
	Repeat	 Green / APP / Repeat		
	A-B	 Yellow / YouTube / Repeat		
	zoom	 Zoom / Size		
	Mode	 D.Menu / Top		
	Step	 Shift + Pause / Step /		
	Slow	 Shift + Play /		
	Vol+	 Vol+		
	Resume	 Smart / List		
	PBC	 Picture / Format		
	Return	 Back / Return		
	Vol-	 Vol-		






















Original	Substitut
On/Off	 Power
Audio Off	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Record	 Rec / Rec Mode
Rewind	 << / Tune-
F.Forward	 >> / Tune+
Prev.	 I<< / Preset-
Next	 >>I / Preset+
Title	 Sound / Title
Audio	 Audio / Lang I/II
Subt.	 Subtitle / EQ
Open/Close	 Eject / Surround
Auto/Track	 Picture / Format
Zoom	 Zoom / Size
Np	 Sleep / Timer

Original	Substitut
Progr.	 TV/Radio /
Top Menu	 D.Menu / Top
Setup	 Setup / OPT /
C/CH	 Text / Goto
DVD/TV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up
Angle	 Info / Angle
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Pbc	 Exit / Cancel / Clear
Menu Down	 Down
Return	 Back / Return
Volume+	 Vol+
Resume	 Smart / List
Slow Up	 CH+ / Page+






















Original	Substitut	Original	Substitut
Volume-	 Vol-		
Display	 Display / Media		
Slow Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
+10	 Guide / EPG / -/--		
0	 0		
R/L	 Fav / Marker / PC		
Search	 Red / Netflix / Search		
Repeat/1/All	 Green / APP / Repeat		

Original	Substitut	Original	Substitut
Rep/A-B	 Yellow / YouTube / Repeat		
Shuffle	 Blue / Prime Video / Random		
Karaoke/Step	 Shift + Pause / Step /		
Echo+	 Shift + Up		
Echo-	 Shift + Down		
3D	 Shift + 3		
Video	 Shift + 4		























Original	Substitut
On/Off	 Power
Audio Off	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Record	 Rec / Rec Mode
Rewind	 << / Tune-
F.Forward	 >> / Tune+
Prev.	 I<< / Preset-
Next	 >>I / Preset+
Title	 Sound / Title
Lang	 Audio / Lang I/II
Subt.	 Subtitle / EQ
Open/Close	 Eject / Surround
Auto/Track	 Picture / Format
Zoom	 Zoom / Size
Pbc	 Sleep / Timer

Original	Substitut
Progr.	 TV/Radio /
Top Menu	 D.Menu / Top
Setup	 Setup / OPT /
Resume	 Text / Goto
DVD/TV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up
Angle	 Info / Angle
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Clear/00:00	 Exit / Cancel / Clear
Menu Down	 Down
Return	 Back / Return
Volume+	 Vol+
Mode	 Smart / List
Slow Up	 CH+ / Page+





Original	Substitut	Original	Substitut
Volume-	 Vol-	Rep/A-B	 Yellow / YouTube / Repeat
Display	 Display / Media	R/L	 Blue / Prime Video / Random
Slow Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
+10	 Guide / EPG / -/--		
0	 0		
C/CH	 Fav / Marker / PC		
Np	 Red / Netflix / Search		
Repeat/1/All	 Green / APP / Repeat		

