



| Original | Substitut    | Original | Substitut             |
|----------|--------------|----------|-----------------------|
|          | 1            |          | 1                     |
|          | 2            |          | 2                     |
|          | 3            |          | 3                     |
|          | Power        |          | Power                 |
|          | 4            |          | 4                     |
|          | 5            |          | 5                     |
|          | 6            |          | 6                     |
|          | TV/R         |          | TV/Radio /            |
|          | 7            |          | 7                     |
|          | 8            |          | 8                     |
|          | 9            |          | 9                     |
|          | EPG          |          | Guide / EPG / -/--    |
|          | 0            |          | 0                     |
|          | Up / CH+     |          | Up                    |
|          | Up / CH+     |          | CH+ / Page+           |
|          | A/D          |          | Sound / Title         |
|          | (<>) L       |          | Audio / Lang I/II     |
|          | Left / Vol-  |          | Left                  |
|          | Left / Vol-  |          | Vol-                  |
|          | OK           |          | OK                    |
|          | Right / Vol+ |          | Right                 |
|          | Right / Vol+ |          | Vol+                  |
|          | Mute         |          | Mute / Dimmer         |
|          | Menu / Setup |          | Menu / Home           |
|          | Menu / Setup |          | Setup / OPT /         |
|          | Down / CH-   |          | Down                  |
|          | Down / CH-   |          | CH- / Page-           |
|          | Audio1 -     |          | << / Tune-            |
|          | Audio1 +     |          | >> / Tune+            |
|          | Set / Info   |          | Info / Angle          |
|          | Next / ESC   |          | Exit / Cancel / Clear |
|          | Audio2 -     |          | I<< / Preset-         |
|          | Audio2 +     |          | >>I / Preset+         |
|          | Down         |          | Smart / List          |





| Original      | Substitut                 | Original | Substitut |
|---------------|---------------------------|----------|-----------|
| Stop / Recall | Stop / Hold               |          |           |
| Stop / Recall | Back / Return             |          |           |
| A/B / ADR     | Yellow / YouTube / Repeat |          |           |
| Memo          | Fav / Marker / PC         |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |
|               |                           |          |           |

