



Original		Substitut		Original		Substitut	
	Power		Power		Delete		3D
	TV - Gids		List		Exit		Exit
	Extra		Options		Back		Back
	Comm.		Subt		<<		<<
	TV - Theek		Dual		>>		>>
	Home		Smart		Pause		Pause
	Mute		Mute		Play		Play
	Help		Info		Rec		Rec
	Vol+		Vol +		Stop		Stop
	Vol-		Vol -		Text		Text
	CH+		Ch +		Red		Red
	CH-		Ch -		Green		Green
	Up		Up		Yellow		Yellow
	Left		Left		Blue		Blue
	OK		Ok		1		1
	Right		Right		2		2
	Down		Down		3		3





	Original	Substitut	Original	Substitut
	Power			
	Mute			
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	. □→			
	Vol+			
	Vol-			
	CH+			
	CH-			

