

 
 
 

 
 

 
 






 














 





Original	Substitut	Original	Substitut
 Power	 Power	 16:9	16:9
 Sleep	 Sleep	 Lang	Lang
 Mute	 Mute	 RCL	RCL
 Timer	 AV	 FAV	FAV
 EPI	 Guide	 Page+ / Timeshift	Shift + Ch +
 SUBTL	 Subt	 Page- / V-Format	Shift + Ch -
 Audio	 Shift + Dual	 Page- / V-Format	Shift + Format
 1	 1	 Up / CH+	Up
 2	 2	 Up / CH+	Ch +
 3	 3	 Down / CH-	Down
 4	 4	 Down / CH-	Ch -
 5	 5	 Right / Vol+	Right
 6	 6	 Right / Vol+	Vol +
 7	 7	 Left / Vol-	Left
 8	 8	 Left / Vol-	Vol -
 9	 9	 OK	Ok
 0	 0	 Menu	Menu

Original	Substitut	Original	Substitut
 Format	Format	 TV	DVD
 Dual	Dual	 SAT	AUX
 Back	Back	 ▶	REC MODE
 Pre Ch	Pre Ch	 ⏪	⏩
 Shift + Ch +	Shift + Ch +	 ⏮	⏭
 Shift + Ch -	Shift + Ch -	 ⏪	⏩
 Shift + Format	Shift + Format	 LIST	⏪
 Up	Up	 DUAL	⏪
 Ch +	Ch +	 SLEEP	⏪
 Down	Down	 TV/R	⏪
 Ch -	Ch -	 FORMAT	⏪
 Right	Right	 3D	⏪
 Vol +	Vol +	 D.MENU	⏪
 Left	Left	 TEXT	⏪
 Vol -	Vol -	 ▲	⏪
 Ok	Ok	 AV	⏪
 Menu	Menu	 MENU	⏪





Original		Substitut	
	Info		Info
	TXT		Text
	Exit		Exit
	Red / SAT		Red
	Green / Zoom		Green
	Green / Zoom		Eject
	Yellow / Pause		Yellow
	Yellow / Pause		Shift + Pause
	Blue / TV/Radio		Blue
	Blue / TV/Radio		TV/R
	<<		<<
	>>		>>
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	<<		<<
	>>		>>

Original		Substitut	
	Slow		Shift + Play
	Rec		Rec
	Media		Media
	Game		Smart
	PVR		Shift + Smart
	HDD		Shift + Media

