 


 






























Original	Substitut	Original	Substitut
 TV/R	TV/R	 PROGRAM TV/RADIO	TV/Radio /
 POWER	POWER	 POWER	Power
 MUTE	MUTE	 DIMMER MUTE	Mute / Dimmer
 SLEEP	SLEEP	 TIMER SLEEP	Sleep / Timer
 1	1	 TV 1	1
 2	2	 DVD 2	2
 3	3	 CD - STB 3	3
 SUB	SUB	 EQ SUBTITLE	Subtitle / EQ
 4	4	 VIDEO 4	4
 5	5	 TAPE 5	5
 6	6	 TUNER 6	6
 EPG	EPG 2	 SHIFT + GUIDE EPG	Shift + Guide / EPG / -/-
 EPG	EPG 1	 GUIDE EPG	Guide / EPG / -/-
 7	7	 AUX - HDD 7	7
 8	8	 USB 8	8
 9	9	 BLUETOOTH 9	9
 TXT	TXT	 GOTO TEXT	Text / Goto

Original	Substitut	Original	Substitut
 RECALL	RECALL	 RETURN BACK	Back / Return
 0	0	 HDMI - BAT 0	0
 FAV	FAV 2	 SHIFT + FAV MARKER	Shift + Fav / Marker / PC
 FAV	FAV 1	 PC FAV MARKER	Fav / Marker / PC
 MENU	MENU	 HOME MENU	Menu / Home
 EXIT	EXIT	 CLEAR EXIT CANCEL	Exit / Cancel / Clear
	Up / CH +		Up
	Left / VOL -		Left
 OK	OK	 OK	OK
	Right / VOL +		Right
	Down / CH -		Down
	Red / Audio	 NETFLIX SEARCH	Red / Netflix / Search
	Red / Audio	 LANG I/II AUDIO	Audio / Lang I/II
	Blue / Info	 ANGLE INFO	Info / Angle
	Blue / Info	 Prime Video RANDOM	Blue / Prime Video / Random
	GREEN/PAUSE	 APP REPEAT	Green / APP / Repeat
	Yellow / Zoom	 SIZE ZOOM	Zoom / Size





Original	Substitut	Original	Substitut
 Yellow / Zoom	 Yellow / YouTube / Repeat		
 VOL+	 Vol+		
 Page+	 CH+ / Page+		
 VOL-	 Vol-		
 Page-	 CH- / Page-		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 PLAY	 Play / Slow		
 STOP	 Stop / Hold		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 PAUSE	 Pause / Step / Freeze		
 REC	 Rec / Rec Mode		

