







 








 


 





















 

 

 

 









 




| Original | Substitut |
|---|---|
|  Power MD |  Power |
|  Direct Tuning |  Text |
|  Dimmer |  Pre Ch |
|  TV |  TV/R |
|  CD |  Yellow |
|  DVD |  Blue |
|  Tuner/Band |  Green |
|  Tape |  Red |
|  VCR |  Smart |
|  MD |  Media |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Muting |  Mute |
|  Stop MD |  Stop |
|  Play MD |  Play |
|  <</I<< MD |  << |
|  >>/>>I MD |  >> |

| Original | Substitut |
|--|---|
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Menu |  D. Menu |
|  Display |  Info |
|  Top Menu/Disc/Deck |  Menu |
|  1 MD |  1 |
|  2 MD |  2 |
|  3 MD |  3 |
|  4 MD |  4 |
|  5 MD |  5 |
|  6 MD |  6 |
|  7 MD |  7 |
|  8 MD |  8 |
|  9 MD |  9 |














 



 

 
 
 

 

 



 

 

 








 

 


 



 

 

 





 



 






| Original | Substitut |
|-------------|---------------|
| 0 MD | 0 |
| >10/-/- MD | Guide |
| Tv/AV | AV |
| Stereo | Dual |
| Surround | Options |
| SFC | Subt |
| Test | Back |
| Delay | Format |
| Level | 3D |
| + | Ch + |
| - | Ch - |
| Power TV | Shift + Power |
| Tv Vol Up | Shift + Vol + |
| Tv Vol Down | Shift + Vol - |
| 1 Tv | Shift + 1 |
| 2 Tv | Shift + 2 |
| 3 Tv | Shift + 3 |

| Original | Substitut |
|------------|---------------|
| 4 Tv | Shift + 4 |
| 5 Tv | Shift + 5 |
| 6 Tv | Shift + 6 |
| 7 Tv | Shift + 7 |
| 8 Tv | Shift + 8 |
| 9 Tv | Shift + 9 |
| 0 Tv | Shift + 0 |
| >10/-/- Tv | Shift + Guide |



 

 






| Original | Substitut | Original | Substitut |
|--|---|--|---|
|  Power DVD |  Power |  Right |  Right |
|  TV |  TV/R |  Left |  Left |
|  VCR |  Smart |  Enter |  Ok |
|  Tuner/Band |  Green |  Stereo |  Dual |
|  Tape |  Red |  Surround |  Options |
|  MD |  Media |  SFC |  Subt |
|  CD |  Yellow |  Test |  Back |
|  DVD |  Blue |  Delay |  Format |
|  Play DVD |  Play |  Level |  3D |
|  I<</<< DVD |  << |  + |  Ch + |
|  Stop DVD |  Stop |  - |  Ch - |
|  >>/>>I DVD |  >> |  1 DVD |  1 |
|  Top Menu/Disc/Deck |  Menu |  2 DVD |  2 |
|  Display |  Info |  3 DVD |  3 |
|  Menu |  D. Menu |  4 DVD |  4 |
|  Up |  Up |  5 DVD |  5 |
|  Down |  Down |  6 DVD |  6 |





| | Original | Substitut | Original | Substitut |
|---|--------------|---|----------|-----------|
|  | 7 DVD |  | | |
|  | 8 DVD |  | | |
|  | 9 DVD |  | | |
|  | 0 DVD |  | | |
|  | >10/./-- DVD |  | | |
|  | Vol+ |  | | |
|  | Vol- |  | | |
|  | Muting |  | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

 



 

 








 
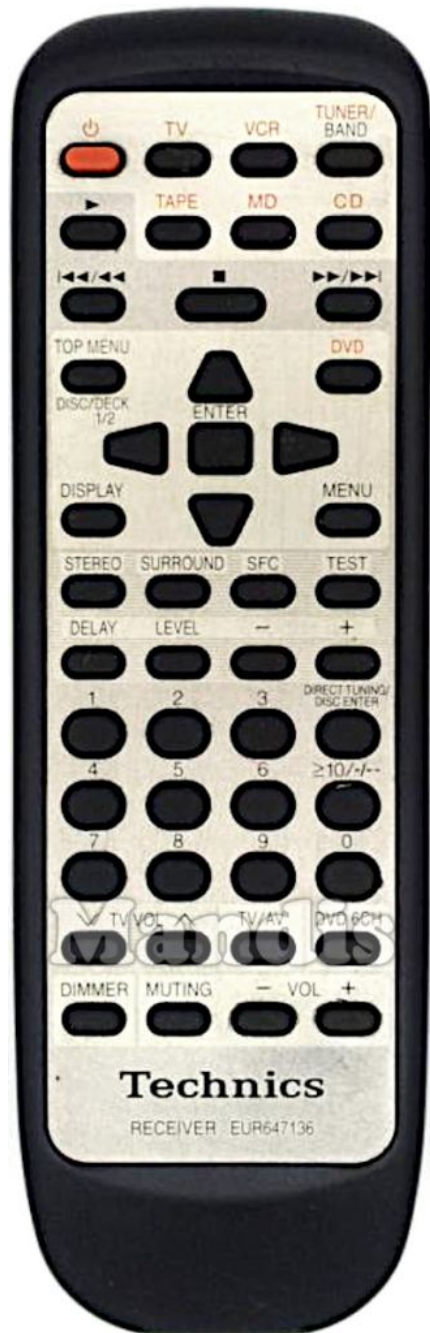 


 







 

 
 

 





| Original | Substitut | Original | Substitut |
|---|--------------------|---|-----------|
|  | Power CD |  | Power |
|  | TV |  | TV/R |
|  | VCR |  | Smart |
|  | CD |  | Yellow |
|  | DVD |  | Blue |
|  | Tape |  | Red |
|  | MD |  | Media |
|  | Tuner/Band |  | Green |
|  | Stop CD |  | Stop |
|  | I<</<< CD |  | << |
|  | >>/>>I CD |  | >> |
|  | Play CD |  | Play |
|  | Menu |  | D. Menu |
|  | Display |  | Info |
|  | Top Menu/Disc/Deck |  | Menu |
|  | Up |  | Up |
|  | Down |  | Down |

| Original | Substitut | Original | Substitut |
|---|------------|---|---------------|
|  | Right |  | Right |
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Stereo |  | Dual |
|  | Surround |  | Options |
|  | SFC |  | Subt |
|  | Test |  | Back |
|  | Delay |  | Format |
|  | Level |  | 3D |
|  | + |  | Ch + |
|  | - |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Muting |  | Mute |
|  | Power Tape |  | Shift + Power |
|  | Stop Tape |  | Shift + Stop |
|  | Play Tape |  | Shift + Play |










 





 


 
 


 



 




 




 



 

 


 
 
 
























| Original | Substitut | Original | Substitut |
|--|--|----------|-----------|
|  I<</<< Tape |  +  Shift + << | | |
|  >>/>>I Tape |  +  Shift + >> | | |
|  Top Menu/Disc/Deck |  +  Shift + Menu | | |
|  1 CD-Tape |  1 | | |
|  2 CD-Tape |  2 | | |
|  3 CD-Tape |  3 | | |
|  4 CD-Tape |  4 | | |
|  5 CD-Tape |  5 | | |
|  6 CD-Tape |  6 | | |
|  7 CD-Tape |  7 | | |
|  8 CD-Tape |  8 | | |
|  9 CD-Tape |  9 | | |
|  0 CD-Tape |  0 | | |
|  >10/-/- CD-Tape |  GUIDE | | |
|  Direct Tuning/Disc Enter |  REPEAT TEXT | | |
| | | | |
| | | | |

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |




 

 




| Original | Substitut | Original | Substitut |
|--|--|--|---|
|  Power VCR |  Power |  5 VCR |  5 |
|  Dimmer |  Pre Ch |  6 VCR |  6 |
|  VCR |  Smart |  7 VCR |  7 |
|  Tape |  Red |  8 VCR |  8 |
|  TV |  TV/R |  9 VCR |  9 |
|  CD |  Yellow |  0 VCR |  0 |
|  DVD |  Blue |  >10/-/- VCR |  Guide |
|  Tuner/Band |  Green |  Direct Tuning/Disc Enter |  Text |
|  MD |  Media |  Vol+ |  Vol + |
|  Stop |  Stop |  Vol- |  Vol - |
|  I<</<< |  << |  Muting |  Mute |
|  >>/>>I |  >> |  Up |  Up |
|  Play |  Play |  Down |  Down |
|  1 VCR |  1 |  Right |  Right |
|  2 VCR |  2 |  Left |  Left |
|  3 VCR |  3 |  Enter |  Ok |
|  4 VCR |  4 |  Top Menu/Disc/Deck |  Menu |

1/2





| Original | Substitut |
|---|--|
|  Display |  Info |
|  Menu |  D. Menu |
|  Stereo |  Dual |
|  Surround |  Options |
|  SFC |  Subt |
|  Test |  Back |
|  Delay |  Format |
|  Level |  3D |
|  + |  Ch + |
|  - |  Ch - |
|  Power Tuner/Band |  Shift + Power |
|  1 Tuner/Band |  Shift + 1 |
|  2 Tuner/Band |  Shift + 2 |
|  3 Tuner/Band |  Shift + 3 |
|  4 Tuner/Band |  Shift + 4 |
|  5 Tuner/Band |  Shift + 5 |
|  6 Tuner/Band |  Shift + 6 |

| Original | Substitut |
|--|---|
|  7 Tuner/Band |  Shift + 7 |
|  8 Tuner/Band |  Shift + 8 |
|  9 Tuner/Band |  Shift + 9 |
|  0 Tuner/Band |  Shift + 0 |
|  >10/-/- |  Shift + Guide |

