



| Original                                                                            | Substitut | Original                                                                            | Substitut         |
|-------------------------------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------|-------------------|
|    | Power     |    | Power             |
|    | Source    |    | AV / Input / RDS  |
|    | 1         |    | 1                 |
|    | 2         |    | 2                 |
|    | 3         |    | 3                 |
|    | 4         |    | 4                 |
|    | 5         |    | 5                 |
|    | 6         |    | 6                 |
|    | 7         |    | 7                 |
|    | 8         |    | 8                 |
|  | 9         |  | 9                 |
|  | TV        |  | TV/Radio /        |
|  | 0         |  | 0                 |
|  | Recall    |  | Fav / Marker / PC |
|  | V+        |  | Vol+              |
|  | Mute      |  | Mute / Dimmer     |
|  | P+        |  | CH+ / Page+       |

| Original                                                                              | Substitut      | Original                                                                              | Substitut             |
|---------------------------------------------------------------------------------------|----------------|---------------------------------------------------------------------------------------|-----------------------|
|    | V-             |    | Vol-                  |
|    | World/Internet |    | Smart / List          |
|    | P-             |    | CH- / Page-           |
|    | Menu           |    | Menu / Home           |
|    | Q.Menu         |    | D.Menu / Top          |
|    | Up             |    | Up                    |
|    | Left           |    | Left                  |
|    | OK             |    | OK                    |
|    | Right          |    | Right                 |
|    | Down           |    | Down                  |
|  | Back           |  | Back / Return         |
|  | Exit           |  | Exit / Cancel / Clear |
|  | i              |  | Info / Angle          |
|  | Music/Camera   |  | Display / Media       |
|  | TV Guide       |  | Guide / EPG / -/-     |
|  | */O            |  | Shift + 1             |
|  | */Q            |  | Shift + 2             |



