














 








































Original	Substitut	
Audio+	 Shift + Vol+	
Reveal	 Setup / OPT /	
Update	 Smart / List	
Bright- Sys	 Shift + CH- /	
Bright+ Mode	 Shift + CH+ /	
AV 2	 Shift + AV / Input / RDS	
4	 4	
5	 5	
6	 6	
7	 7	
8	 8	
9	 9	
Guide -/-- 1.	 Guide / EPG / -/--	
0/10	 0	
2.Fav P/C 2.	 Fav / Marker / PC	
Red	 Red / Netflix / Search	
Green	 Green / APP / Repeat	

Original	Substitut	
Yellow	 Yellow / YouTube / Repeat	
Blue	 Blue / Prime Video / Random	
Audio-	 Shift + Vol-	
3	 3	
Tone-	 << / Tune-	
Tone+	 >> / Tune+	
Color+ P.Std	 Picture / Format	
Contrast+	 >> / Preset+	
Color- S.Std	 Sound / Title	
Contrast-	 << / Preset-	
Surround	 Eject / Surround	
Nicam/Mono	 Shift + Audio / Lang I/II	
Level L	 Shift + Left	
Level R/Woofer	 Shift + Right	
Display	 Display / Media	
Mute	 Mute / Dimmer	
Txt Stop	 Stop / Hold	



Original	Substitut	Original	Substitut
Info	 Info / Angle	Volume+	 Vol+
Subt.List	 Subtitle / EQ	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Menu audio	 Audio / Lang I/II
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
Txt Expand	 Zoom / Size	2	 2
TV/AV	 AV / Input / RDS		
Menu	 Menu / Home		
Menu Up	 Up		
On/Off	 Power		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		

