







 




















 
 









Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Eject/Tv Audio		Eject / Surround
	4		4
	5		5
	6		6
	Recall/Goto		Shift + Text /
	7		7
	8		8
	9		9
	0		0
	Tv Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up

Original	Substitut	Original	Substitut
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	DVD Menu		D.Menu / Top
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Sound		Sound / Title
	CH-		CH- / Page-
	Vol-		Vol-
	Pic		Picture / Format
	CH+		CH+ / Page+
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	DVD Setup		Setup / OPT /
	Back/Tv/Radio		Shift + Back / Return
	Text		Text / Goto





	Original	Substitut	
	EPG	Guide / EPG / -/--	
	Play	Play / Slow	
	Pause	Pause / Step / Freeze	
	Stop	Stop / Hold	
	FAV	Fav / Marker / PC	
	Info	Info / Angle	
	Red/DVD/USB	Red / Netflix / Search	
	Green/Title	Green / APP / Repeat	
	Yellow/PBC	Yellow / YouTube / Repeat	
	Blue/Angle	Blue / Prime Video / Random	
	<<	<< / Tune-	
	>>	>> / Tune+	
	l<<	l<< / Preset-	
	>>l	>>l / Preset+	
	Return	Back / Return	
	Display	Display / Media	
	DVD Audio	Audio / Lang I/II	

	Original	Substitut	
	Subtitle	Subtitle / EQ	
	Reveal	+ Shift + Exit / Cancel / Clear	
	Hold	+ Shift + Stop /	
	List	Smart / List	
	Index	TV/Radio /	
	Subpage	+ Shift + Smart / List	
	Size	Zoom / Size	
	Mix	+ Shift + Display / Media	
	Freeze	+ Shift + Pause / Step /	

