










 

 

 
 

 

 



 












 



 


 
 



 



 
 


 
 








 




Original	Substitut	Original	Substitut
 Power	 Power	 Prog+	 Ch +
 1	 1	 Prog-	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 List	 List
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 EPG	 Guide	 Red / Timer	 Red
 Info	 Info	 Red / Timer	 AV
 Vol+	 Vol +	 Green / FAV	 Green
 Vol-	 Vol -	 Green / FAV	 Pre Ch
 Mute	 Mute	 Yellow / Repeat	 Yellow
 TV / Radio	 TV/R	 Blue / Goto	 Blue





Original		Substitut		Original		Substitut	
	Audio		Dual				
	SUB		Subt				
	Yellow / Repeat	 + 	Shift + Text				
	Text		Text				
	File		Media				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Rec		Rec				
	I<< PREV		I<<				
	>>I NEXT		>>I				
	<< REW		<<				
	>> FWD		>>				

