 

 



 

 







 

 







 



 



 



 















 



 



 



 

 

 





 



 

 

 

 









 

 

 





Original	Substitut	Original	Substitut
 Open/Close	 Eject / Surround	 Prog-	 CH- / Page-
 Input Select	 AV / Input / RDS	 Clear	 Exit / Cancel / Clear
 HDMI	 Shift + 0	 [i+]/Info	 Info / Angle
 Power	 Power	 Text	 Text / Goto
 1	 1	 Variable Replay	 Picture / Format
 2	 2	 Variable Skip	 Zoom / Size
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Top Menu	 Shift + D.Menu / Top Menu
 5	 5	 Disc Menu	 D.Menu / Top
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter/OK	 OK
 9	 9	 Right	 Right
 0	 0	 Display	 Display / Media
 Timer Prog	 Sleep / Timer	 Down	 Down
 Setup	 Setup / OPT /	 Return	 Back / Return
 Prog+	 CH+ / Page+	 Red	 Red / Netflix / Search

Original	Substitut	Original	Substitut
 Prog-	 CH- / Page-	 Clear	 Exit / Cancel / Clear
 [i+]/Info	 Info / Angle	 Text	 Text / Goto
 Variable Replay	 Picture / Format	 Variable Skip	 Zoom / Size
 Guide	 Guide / EPG / -/-	 Top Menu	 Shift + D.Menu / Top Menu
 Disc Menu	 D.Menu / Top	 Up	 Up
 Left	 Left	 Enter/OK	 OK
 Right	 Right	 Display	 Display / Media
 Down	 Down	 Return	 Back / Return
 Red	 Red / Netflix / Search		



