



 
 
 

 

 

 






 
 
 
 



 




 






Original	Substitut	Original	Substitut
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	3D		3D
	Mute		Mute
	[i+]		Info
	P+		Ch +

Original	Substitut	Original	Substitut
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Home		Smart
	Exit		Exit
	Back		Back
	Guide		Guide
	Text		Text
	[>]		Options
	Quick		TV/R
	*/O		Format



