




 


 
 

 
 
 

 


 


 


 

 


 



 
















Original	Substitut	Original	Substitut
 Power	 Power	 Timer/Prog.	 Sleep
 Input Select	 AV	 Time Slip	 Guide
 Open/Close	 Eject	 Setup	 Options
 1	 1	 Audio	 Dual
 2	 2	 Clear	 Exit
 3	 3	 Chapter Mark	 List
 4	 4	 Disc Menu	 D. Menu
 5	 5	 Top Menu	 Menu
 6	 6	 Return	 Back
 7	 7	 Display	 Info
 8	 8	 Up	 Up
 9	 9	 Enter	 Ok
 0	 0	 Down	 Down
 Prog+	 Ch +	 Right	 Right
 Prog-	 Ch -	 Left	 Left
 Satellite Link	 Media	 I<< Skip	 I<<
 Mode	 Smart	 Skip >>I	 >>I





	Original	Substitut		
	<<		<<	
	>>		>>	
	Play		Play	
	Stop		Stop	
	Pause		Pause	
	HDD/DVD Rec		Rec	
	Variable Replay		Format	
	Variable Skip		3D	
	>II/Adjust+		Shift + Right	
	II</Adjust-		Shift + Left	
	DVD		Blue	
	HDD		Yellow	
	AV Select		Red	
	Rec Mode		Shift + Rec	
	Search		TV/R	
	Repeat		Text	
	Dubbing		Subt	

	Original	Substitut		
	1.3x/0.8x Play		Green	

