








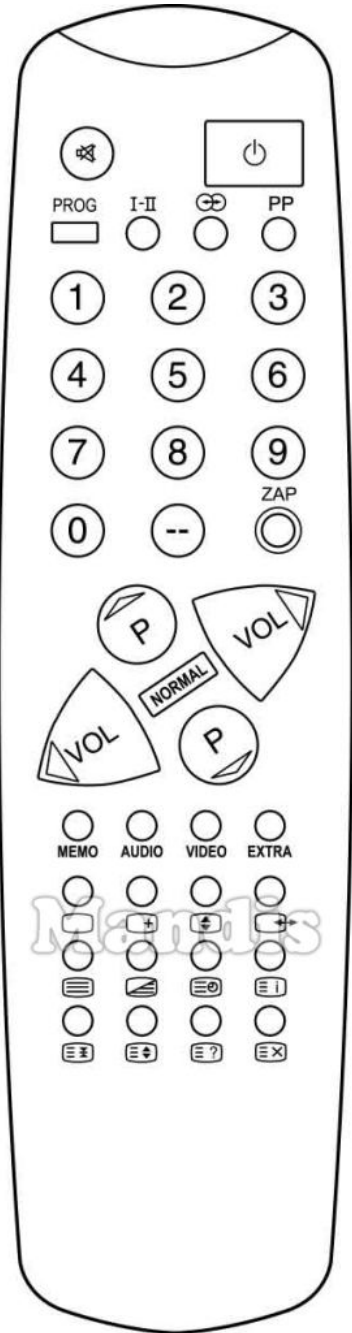




Original	Substitut	Original	Substitut
	Mute		Mute / Dimmer
	Power		Power
	Prog		TV/Radio /
	I-II		Audio / Lang I/II
	O to O		Sound / Title
	PP		Back / Return
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide / EPG / --

Original	Substitut	Original	Substitut
	ZAP		Smart / List
	Up / P+		Up
	Up / P+		CH+ / Page+
	Right / Vol+		Right
	Right / Vol+		Vol+
	Left / Vol-		Left
	Left / Vol-		Vol-
	Normal		OK
	Down / P-		Down
	Down / P-		CH- / Page-
	Red / Memo		Red / Netflix / Search
	Green / Audio		Green / APP / Repeat
	Green / Audio		Shift + Audio / Lang I/II
	Yellow / Video		Yellow / YouTube / Repeat
	Blue / Extra		Blue / Prime Video / Random
	[]		Display / Media
	[+]		Stop / Hold





Original	Substitut	Original	Substitut
[◆]	OPT-TOOLS SETUP Setup / OPT /		
[↔]	TOP MENU D.MENU D.Menu / Top		
[≡]	GOTO TEXT Text / Goto		
[/≡]	SHIFT + GOTO Text /		
[≡⊖]	EQ SUBTITLE Subtitle / EQ		
[≡i]	ANGLE INFO Info / Angle		
[≡⏪]	STEP - FREEZE Pause / Step / Freeze		
[≡◆]	SIZE ZOOM Zoom / Size		
[≡?]	RDS AV INPUT AV / Input / RDS		
[≡X]	CLEAR EXIT Exit / Cancel / Clear		

Original	Substitut

