



	Original	Substitut	Original	Substitut	
	Power		Power		AV / Input / RDS
	Mute		Mute / Dimmer		Info / Angle
	1		1		Menu / Home
	2		2		Exit / Cancel / Clear
	3		3		Up
	4		4		Down
	5		5		Right
	6		6		Left
	7		7		OK
	8		8		Vol+
	9		9		Vol-
	0		0		Fav / Marker / PC
	-/--		Shift + Guide / EPG / -/--		Picture / Format
	Recall		Back / Return		Sound / Title
	Sleep		Sleep / Timer		CH+ / Page+
	Audio		Audio / Lang I/II		CH- / Page-
	Aspect		Shift + Picture / Format		Red / Netflix / Search





Original	Substitut	Original	Substitut
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Home		Shift + Menu /
	Setup		Setup / OPT /
	Mouse		Display / Media
	Browser		Guide / EPG / -/--
	Text		Text / Goto
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<</Hold		<< / Tune-
	>>/Subpage		>> / Tune+
	I<<		I<< / Preset-
	>>I/Cancel		>>I / Preset+
	Reveal		Rec / Rec Mode
	Size		Zoom / Size

