



 
 

 
 
 

 









 

 



Original	Substitut
	Power
	[::]
	Netflix
	prime video
	You Tube
	Google Play
	<<
	Play
	Pause
	>>
	Rec
	Guía
	Up
	TV
	Left
	OK
	Right

Original	Substitut
	Back
	Down
	Home
	Vol+
	Smart
	CH+
	Vol-
	CH-
	1
	2
	3
	4
	5
	6
	7
	8
	9





Original	Substitut	Original	Substitut
	Mute		Mute / Dimmer
	0		0
	(>)		Fav / Marker / PC

