
 
 

 
 
 
 
 


 


 


 


 




Original	Substitut
	Mute / Dimmer
	Shift + Pause / Step /
	Audio / Lang I/II
	Power
	Smart / List
	Sleep / Timer
	Picture / Format
	Display / Media
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Substitut
	AV / Input / RDS
	0
	Back / Return
	Setup / OPT /
	Sound / Title
	Up
	CH+ / Page+
	Vol-
	Left
	Menu / Home
	OK
	Right
	Vol+
	CH- / Page-
	Down
	Text / Goto
	Subtitle / EQ





Original	Substitut
 [=]	 TV/Radio /
 <</[...]	 << / Tune-
 >>/[?]	 >> / Tune+
 [X]	 Fav / Marker / PC
 Red/↑	 Red / Netflix / Search
 Green/←	 Green / APP / Repeat
 Yellow/→	 Yellow / YouTube / Repeat
 Blue/Enter/H.Lock	 Blue / Prime Video / Random
 White/↓/CH.List	 Guide / EPG / -/--
 Pause/Timer	 Pause / Step / Freeze
 [◆]/Zoom	 Zoom / Size
 Exit	 Exit / Cancel / Clear

Original	Substitut

