














 
 
 


 
 


 

 

 



 

 
 
 

 

 






 
 



 



 
 
 

 
 


 

 
 




 

 
 


 
 
 
 
 
 
 
 


 



 
 




 
 
 




Original	Substitut	Original	Substitut
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Substitut	Original	Substitut
 Vol -	 Vol -	 MUTE	 SHIFT
 CH +	 Ch +	 TV	 DVD
 CH -	 Ch -	 SAT	 AUX
 Exit	 Exit	 PLAY MODE	 REC MODE
 Red / USB Left	 Red	 FF	 II
 Red / USB Left	 Shift + Left	 ■	 ▶
 Green / USB	 Green	 RR	 ■
 Green / USB	 Shift + Down	 SOUND	 AD
 Yellow / USB Up	 Yellow	 SETTINGS	 LIST
 Yellow / USB Up	 Shift + Up	 DUAL	 SUBT
 Blue / USB Right	 Blue	 PICTURE	 OPT
 Blue / USB Right	 Shift + Right	 ECO	 3D
 Up	 Up	 SLEEP	 TV/R
 Left	 Left	 FORMAT	 TIMER
 Enter	 Ok	 E-MANUAL	 REPEAT
 Right	 Right	 ZOOM	 TEXT
 Down	 Down	 D.MENU	 AV





Original	Substitut	
	Power	
	AV	
	Exit	
	Menu	
	Dual	
	Media	
	Options	
	Text	
	TV/R	
	1	
	2	
	3	
	6	
	5	
	4	
	7	
	8	

Original	Substitut	
	9	
	0	
	Guide	
	Up	
	Right	
	Ok	
	Left	
	Down	
	Subt	
	Pause	
	Rec	
	<<	
	Play	
	>>	
	Shift + Media	
	Shift + Dual	
	Shift + 6	

