




 
 



 

 

 


 

 













 

 





 

 
 
 


 

 

 

 



 



 
 






 

Original	Substitut	Original	Substitut
	Power		Power
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	Audio/Lang		Audio / Lang I/II
	4		4
	5		5
	6		6
	Tv/Radio		TV/Radio /
	7		7
	8		8
	9		9
	Exit		Exit / Cancel / Clear
	CH.List		Smart / List

Original	Substitut	Original	Substitut
	0		0
	Back		Back / Return
	Menu		Menu / Home
	CH-		CH- / Page-
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Enter		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	Vol+		Vol+
	Setup		Setup / OPT /
	Play/Timeshift		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Eject		Eject / Surround





Original	Substitut	Original	Substitut
 REC	Rec	 REC MODE	Rec / Rec Mode
 TEXT	Text	 GOTO TEXT	Text / Goto
 TEXT	<<	 TUNE-	<< / Tune-
 REVEAL	>>/Reveal	 TUNE+	>> / Tune+
 HOLD	I<</Hold	 PRESET-	I<< / Preset-
 SUB.P	>>I/Sub.P	 PRESET+	>>I / Preset+
 SUB.T	SUB.T	 EQ	Subtitle / EQ
 INDEX	Index/Title	 SHIFT +  TITLE SOUND	Shift + Sound / Title
 ZOOM SIZE	Size/Zoom	 SIZE ZOOM	Zoom / Size
 D.MENU	D.Menu	 TOP MENU D.MENU	D.Menu / Top
 D.MENU EPG	EPG	 GUIDE EPG	Guide / EPG / -/--
 FAV	FAV/Prog	 PC FAV MARKER	Fav / Marker / PC
 P.MODE	P.Mode/Lang	 FORMAT PICTURE	Picture / Format
 S.MODE	S.Mode/Search	 TITLE SOUND	Sound / Title
 INFO	Info/Display	 ANGLE INFO	Info / Angle
 ANGLE	Red/Angle	 NETFLIX SEARCH	Red / Netflix / Search
 SLOW	Green/Slow	 APP REPEAT	Green / APP / Repeat

Original	Substitut	Original	Substitut
 A-B	Yellow/A-B	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 REPEAT	Blue/Repeat	 Prime Video RANDOM	Blue / Prime Video / Random

