



 
Original	Substitut
	Mute
	Power
	PP
	I / II
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	--
	P<P
	Menu

Original	Substitut
	Mute / Dimmer
	Power
	Back / Return
	Audio / Lang I/II
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Fav / Marker / PC
	Display / Media
	Menu / Home

Original	Substitut
	Info
	Left
	P +
	P +
	Right
	P -
	P -
	Vol -
	Vol +
	Red / Sound
	Green / Picture
	Yellow / Feature
	Blue / Install
	TV
	AV
	Text
	Mix

Original	Substitut
	Info / Angle
	Left
	Shift + CH+ /
	CH+ / Page+
	Right
	Shift + CH- /
	CH- / Page-
	Vol-
	Vol+
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	TV/Radio /
	AV / Input / RDS
	Text / Goto
	Shift + Text / Goto



[illegible]