



 

 

 
 


 

 

 
 


 
 


 
 


 
 
 

 

 

 

 
 


 

 

 
 
 
 
 


 


 
 


 
 
 




 



 







Original	Substitut	Original	Substitut
 Power	 Power	 CH+	 Ch +
 Source	 AV	 CH-	 Ch -
 Sleep	 Sleep	 Down	 Down
 Mute	 Mute	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Vol-	 Vol -
 3	 3	 Vol+	 Vol +
 4	 4	 Enter	 Ok
 5	 5	 Red	 Red
 6	 6	 Green	 Green
 7	 7	 Yellow	 Yellow
 8	 8	 Blue	 Blue
 9	 9	 Info	 Info
 0	 0	 EPG	 Guide
 -/--	 Shift + Guide	 Menu	 Menu
 Recall	 Pre Ch	 Nicam	 Media
 Up	 Up	 FAV+	 >>

Original	Substitut	Original	Substitut
 TV	 AUX	 TV	 AUX
 DVD	 SAT	 DVD	 SAT
 SLEEP	 TEXT	 SLEEP	 TEXT
 DUAL	 SUBT	 DUAL	 SUBT
 SEARCH	 PICTURE	 SEARCH	 PICTURE
 REPEAT	 ZOOM	 REPEAT	 ZOOM
 E-MANUAL	 TIMER	 E-MANUAL	 TIMER
 TOP MENU	 INFO	 TOP MENU	 INFO
 MENU	 OK	 MENU	 OK
 EXIT	 BACK	 EXIT	 BACK
 HOME	 SMART	 HOME	 SMART
 APP	 MEDIA	 APP	 MEDIA
 CH+	 CH-	 CH+	 CH-
 1	 2	 1	 2
 2	 3	 2	 3
 3	 4	 3	 4
 4	 5	 4	 5
 5	 6	 5	 6
 6	 7	 6	 7
 7	 8	 7	 8
 8	 9	 8	 9
 9	 0	 9	 0
 0	 PRE-CH	0	PRE-CH
A	B	A	B
B	C	B	C
C	D	C	D
D	Mandis SHOP	D	Mandis SHOP
Mandis SHOP	www.mandis.tv	Mandis SHOP	www.mandis.tv





	Original	Substitut		Original	Substitut
FAV-	FAV-	<<	<<		
TXT	TXT	REPEAT TEXT	Text		
EDITOR/GROUP	Edit/Group	SETTINGS OPT	Options		
INDEX	Index	RETURN BACK	Back		
LANG/AUDIO	Lang/Audio	SOUND DUAL	Dual		
TV/RADIO	TV/Radio	SEARCH TV/R	TV/R		
SUBTITLE	Subtitle	AD SUBT	Subt		
SUBPAGE	Subpage	SHIFT + AD SUBT	Shift + Subt		
SIZE	Size	PICTURE FORMAT	Format		
HOLD	Hold	ECO 3D	3D		
STILL	Still	CLEAR EXIT	Exit		
P.MODE	P.Mode	SHIFT + PICTURE FORMAT	Shift + Format		
S.MODE	S.Mode	SHIFT + SOUND DUAL	Shift + Dual		

